



Wiring:

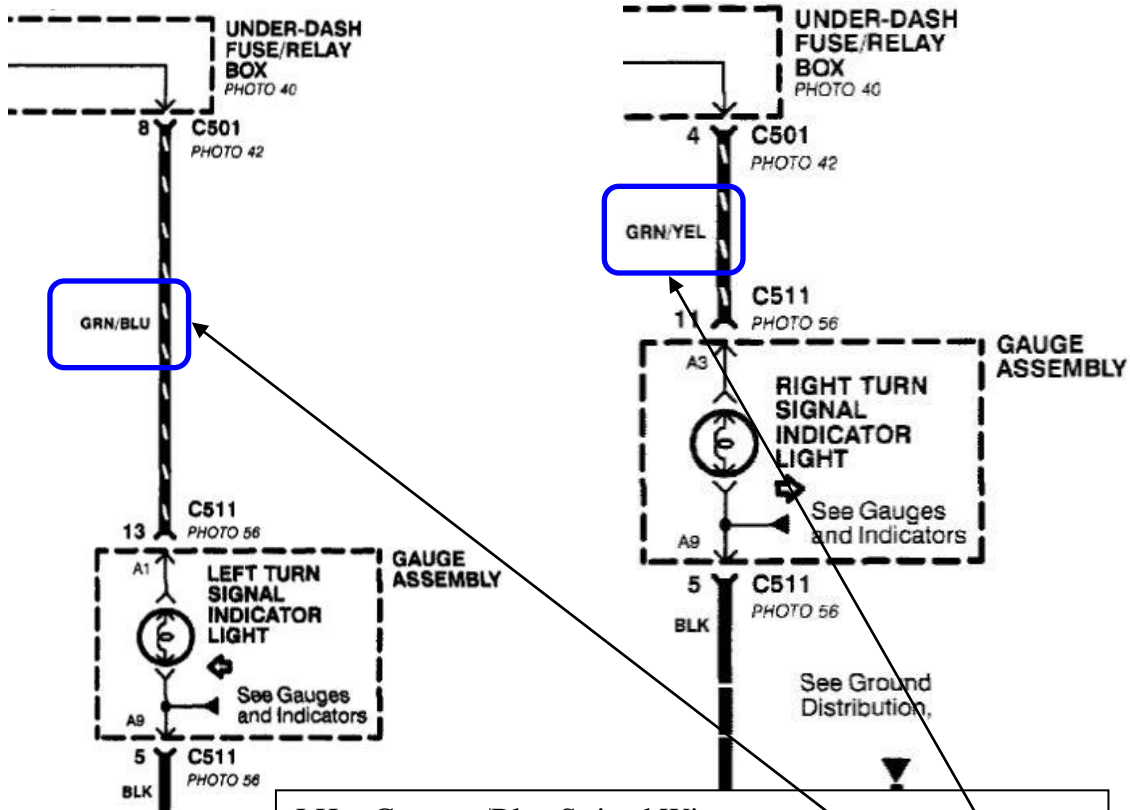

LH = Green w/Blue Striped Wire
 RH = Green w/Yellow Striped Wire
 Location: Under Dash Fuse/ Relay Box (connector C501)

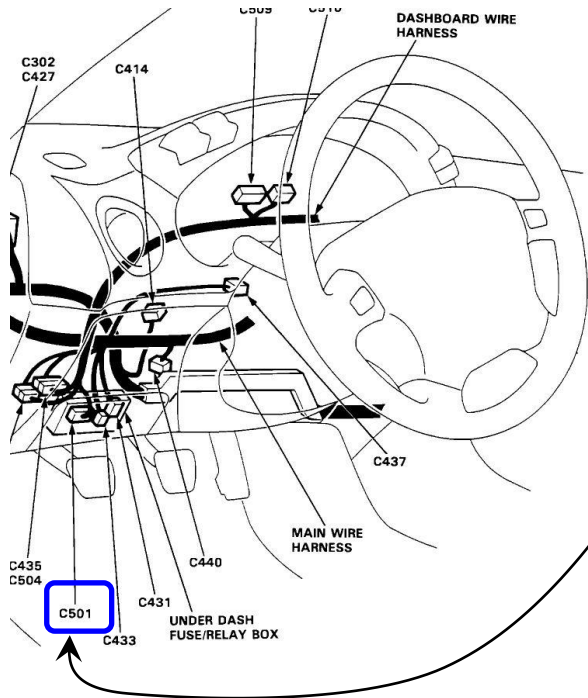


Door Panel removal:

NOTE: Lower the glass fully.

1. Pry out the cap, then remove the screw. Detach the hooks by sliding it forward. Pull the inside door handle out half-way, then disconnect the rod and cable.

NOTE:

- Take care not to snap the hooks.
- Take care not to bend the rod and cable.
- Take care not to scratch the inside door handle and door panel.

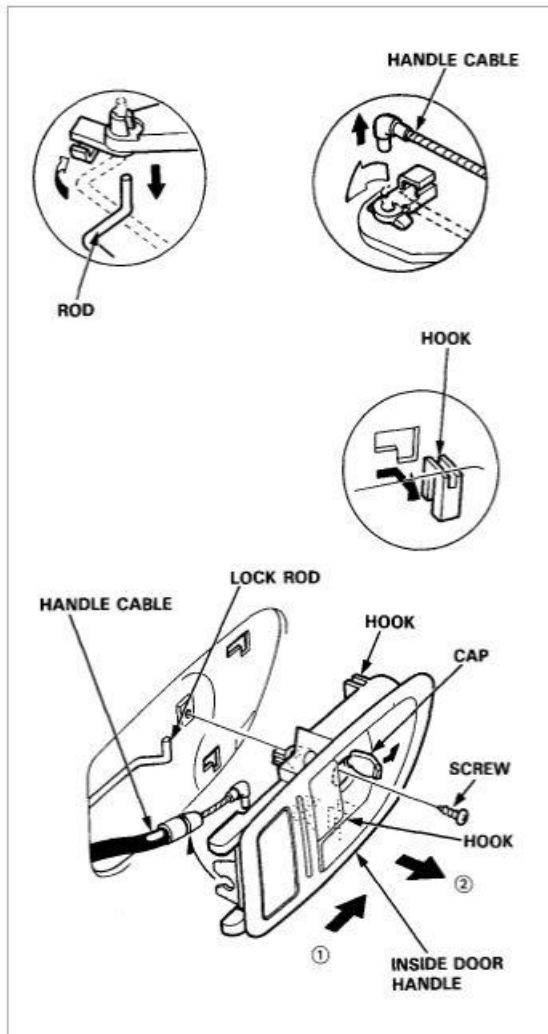


Door Panel Removal Continued:

2. Remove the cap, then remove the screw. Remove the clips attaching the door panel (see trim pad remover).

Remove the door panel by pulling it upward.

Disconnect the power window switch connector. If so equipped, disconnect the [power mirror switch](#) connector and power door lock switch connector (driver's)


NOTE: Remove the panel with as little bending as

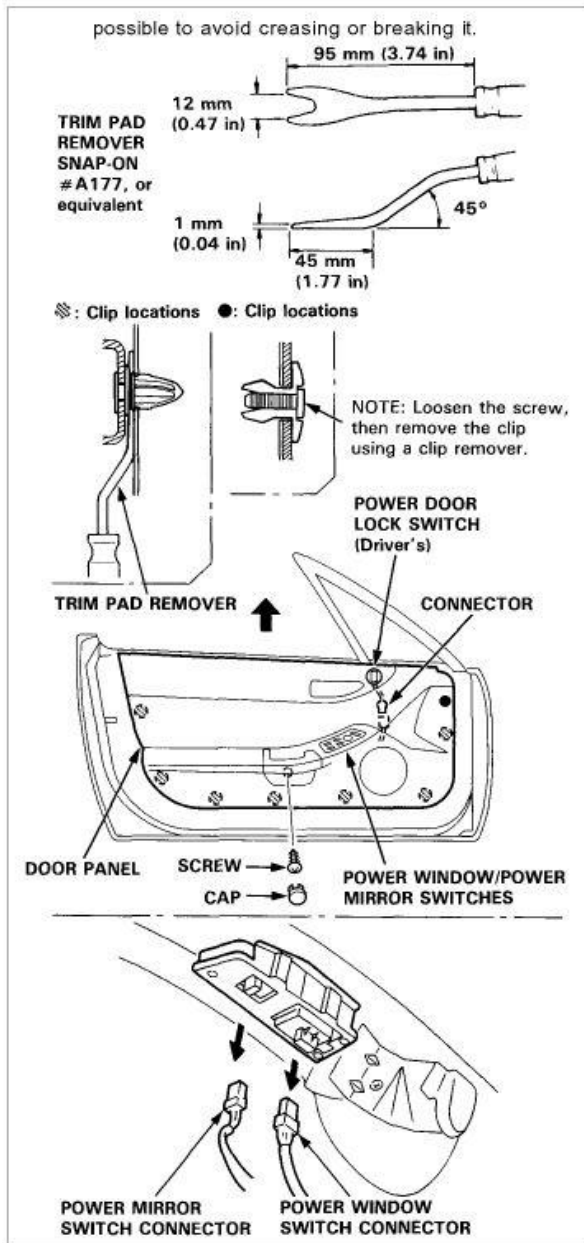

Door Panel Removal Continued:

3. Remove the door lock unit, then disconnect the connector (passenger's). Remove the front speaker, then remove the adapter. Detach the grommets and connector clip, then carefully remove the plastic cover.

NOTE: When removing the grommets, use a clip remover.

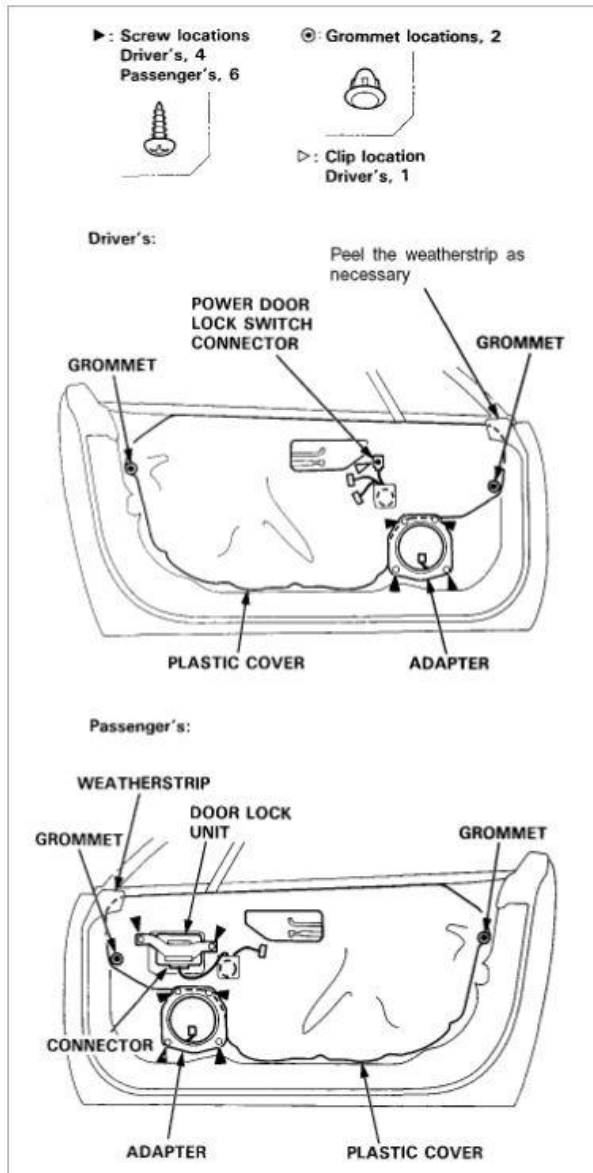

4. Install the door panel and plastic cover in the reverse order of removal.