



## *Signal®* Mirror Installation Instructions

2006-2009 Honda Goldwing 1800 Motorcycle



***THE safety accessory of the 21<sup>st</sup> Century.™***

**PROFESSIONAL INSTALLATION RECOMMENDED:**

Warranty does not cover damage to the vehicle or mirror housing due to improper installation. Muth Mirror Systems, LLC (MMS) assumes no responsibility with regard to the accuracy of this information. MMS assumes no liability or responsibility resulting from improper installation, even in reliance upon this information. Proper installation is the responsibility of the installer. It is your responsibility to verify any circuit before interfacing with it using a digital multimeter.

**INCLUDED ITEMS:**

1-left and 1-right *Signal*® mirror  
1-left and 1-right wire harness  
1-instruction manual

**REQUIRED TOOLS:**

Philips head screwdriver  
Sturdy gloves  
Safety glasses or goggles

**PLEASE READ INSTRUCTIONS PRIOR TO INSTALLATION.**

**PROBLEMS OR QUESTIONS?**

Technical Assistance is available by calling  
Muth Mirror Systems Technicians at:

1-800-844-6616


Monday through Friday  
Between 8:00 a.m. and 5:00 p.m. CST

Or through the Muth web site: [www.muthco.com](http://www.muthco.com)

Or via E-mail: [techsupport@muthco.com](mailto:techsupport@muthco.com)





# Mirror Replacement

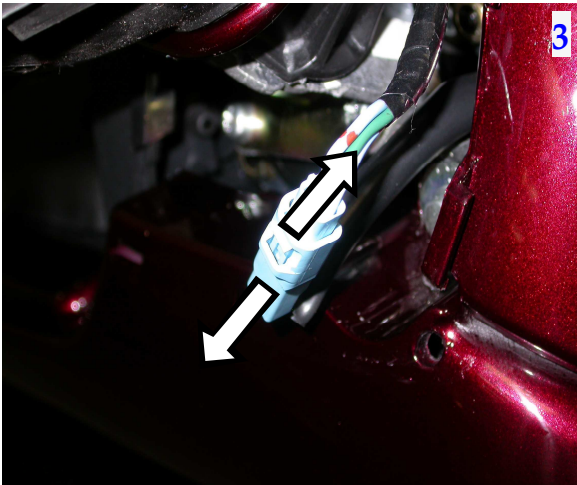

1. Remove screw from bottom of mirror housing. Remove OEM mirror from housing by sliding mirror mount insert tabs out from insert slots.
2. Roll back rubber gasket from around mirror base as shown. Pivot mirror housing forward to gain access to wiring.
3. Unplug OEM connectors.
4. Insert supplied adapter harness into mirror housing by sliding the smaller connector through the hole as shown.

# Mirror Replacement Continued

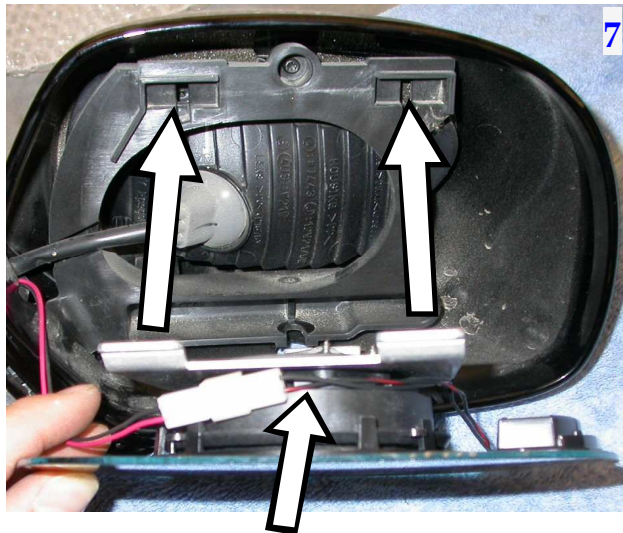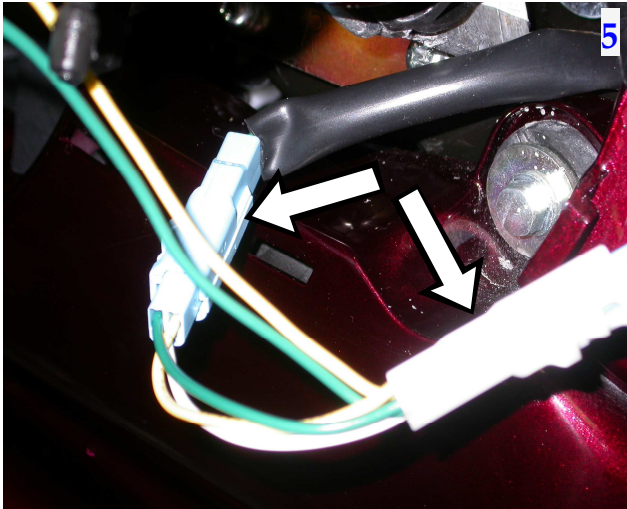

5. Connect the supplied adapter harness onto both ends of OE wires.
6. Plug the *Signal*® mirror wire connectors together.
7. Assemble *Signal*® mirror into housing by routing *Signal*® mirror wires along the top of the assembly. Insert the tabs into the slots as shown. Carefully swing the *Signal*® mirror into position. Reattach the screw located on the bottom of the mirror housing. Activate turn indicator to verify that the *Signal*® mirror is functioning.
8. Repeat step 1 – 7 for the mirror on the other side.

**Muth products are protected by these, and other pending, United States Patents**

3,075,779	5,005,009	5,014,167	5,128,659	5,207,492	5,355,284	5,361,190	5,481,409	5,528,422	5,619,374	5,619,375
5,788,357	6,005,724	6,045,243	6,076,948	6,257,746	6,700,123	6,749,325	6,918,685	7,008,091	7,015,642	7,104,676
D363,920	D394,833	D409,540	D425,466	D426,506	D426,507	D427,128	D428,372	D428,373	D428,842	D429,202
D430,088										