


Door Panel removal:**Tools Required**


J 38778 Door Trim Pad Clip Remover

Removal Procedure

1. Remove the cover in the armrest pull cup.
2. Remove the armrest pull cup screws.
3. Remove the screw cover from the inside door handle. Remove the screw.
4. Slide the J 38778 behind the door trim extension panel. Press out to free the retainer.

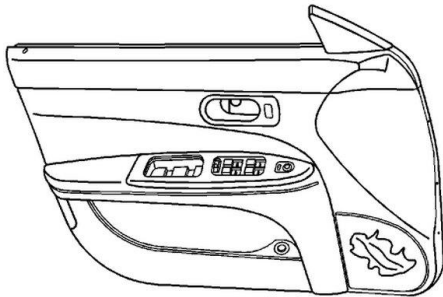

5. Starting at the door bottom, use the J 38778 to disengage the retainers from the door trim panel.
6. Lift the trim panel up to release the top edge and move it away from the door to expose the inside door handle lock rod.
7. Using needle nose pliers, compress the plastic connector on the cable end to release the cable from the door panel.
8. Disconnect the door handle cable end from the door handle.

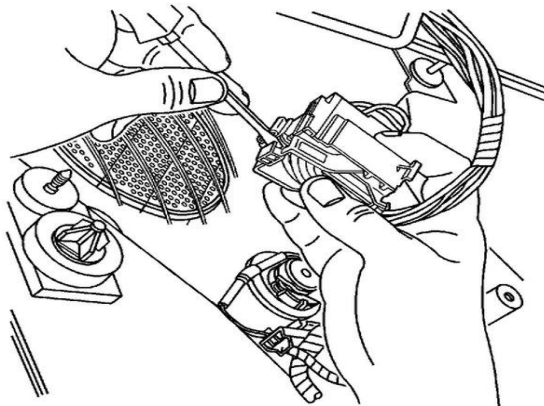

9. Disconnect the electrical connector to the door electric harness. Pinch the release tabs and lift the cam lock and separate the connector.
10. Remove the front door trim panel from the vehicle.

***To re-install door panel, reverse the above-listed steps**